

## Bulk Current Injection Probe

### 1 Introduction

The TBBCI1-300K420-HV snap-on Bulk Current Injection probe can be used in the frequency range up to 400 MHz.

The BCI probe can be used for ISO11452-4 BCI testing, GJB 151B, CS114 testing for MIL-STD 461G and DO160 section 20 testing. The probe also complies with DO160 section 22, pulse induced dampened sinusoidal test for 5 kV pulse injection.

The insertion loss is 5 dB for most of its bandwidth. The probe is individually characterized and usable in the frequency range 10 kHz – 450 MHz. The probe can be used to inject severity levels I (60mA), II (100mA), III (150mA), IV (200mA) and customer specific severity level V up to 350 mA.

The probe can also be used for RF current monitoring applications.



*Picture 1: TBBCI1-300K420-HV Bulk Current Injection probe*

The aperture of the RF current monitoring probe is 27 mm. The typical insertion loss is 5 dB and the typical transfer impedance is 26 dB Ohm.

## Bulk Current Injection Probe

### 2 Specification

|                            |                                                                                                                        |
|----------------------------|------------------------------------------------------------------------------------------------------------------------|
| Compliance:                | ISO 11452-4; MIL-STD-461 CS114, GJB 151B-2013, DO-160                                                                  |
| Characterized freq. range: | 10 kHz to 500 MHz                                                                                                      |
| Insertion loss:            | 5 dB typ.; 50 Ohm system (100 Ohm loop impedance)                                                                      |
| Transfer impedance:        | 29 dB Ohm typ.; 50 Ohm system (100 Ohm loop impedance)                                                                 |
| Power rating:              | capable of injecting severity levels I, II, III, IV according to ISO 11452 and customer specified level V up to 350 mA |
| Max. core temperature:     | 80 °C                                                                                                                  |
| Connector type:            | BNC-SHV male                                                                                                           |
| Aperture diameter:         | 27 mm                                                                                                                  |
| Outside diameter:          | 92 mm                                                                                                                  |
| Height:                    | 76 mm                                                                                                                  |
| Weight:                    | 1.2 kg                                                                                                                 |

### 3 Transfer impedance

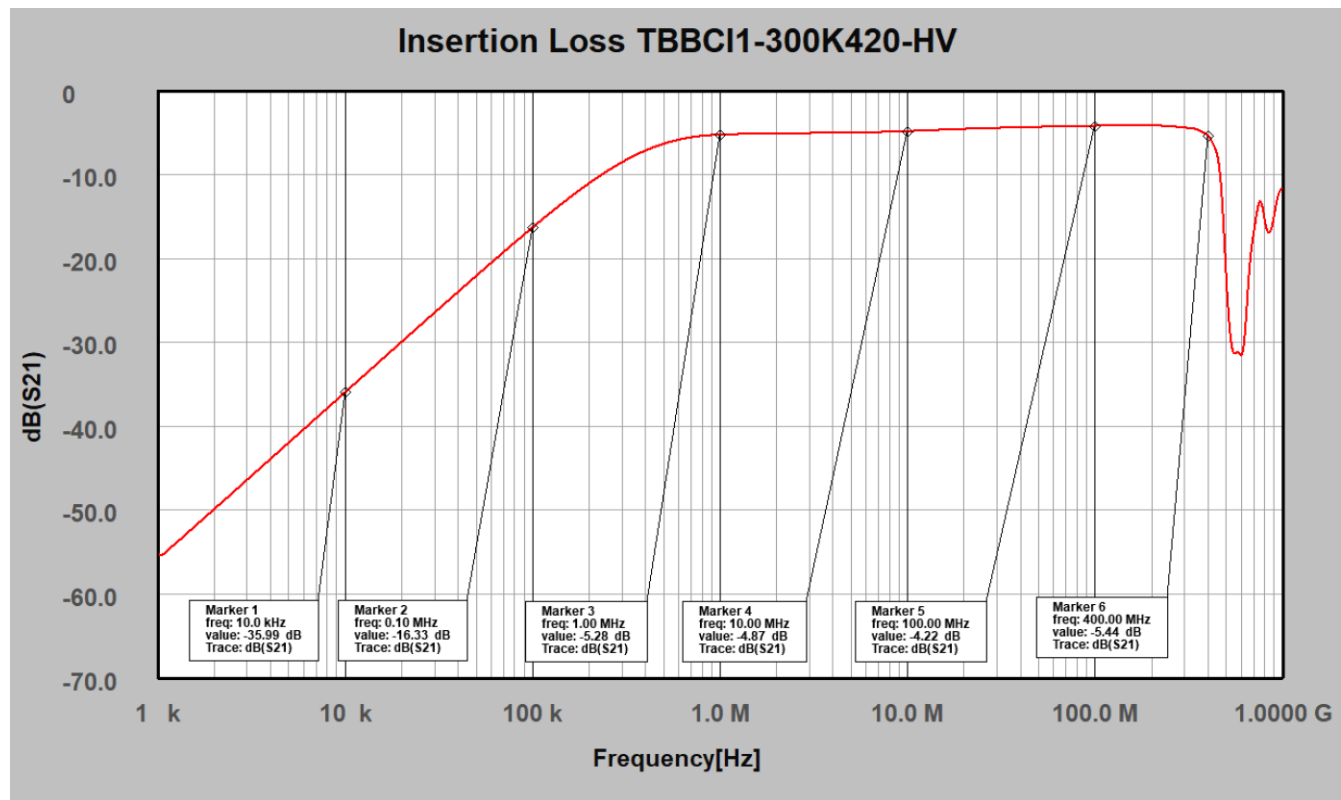


Figure1: typical insertion loss: 1 kHz to 1 GHz logarithmic, 100 Ohm loop impedance



## Bulk Current Injection Probe

### 4 Insertion loss and transfer impedance table

The table below shows typical insertion loss and transfer impedance data of a TBBCI1-300K420-HV BCI probe. Each current probe is delivered with its corresponding measurement protocol. This data can be used to calculate the required power for immunity testing or for the creation of a correction file for EMCview or similar EMC measurement software. The transfer impedance in dBΩ subtracted from the analyzer reading in dBμV gives the corrected reading in dBμA.

| Frequency [MHz] | Insertion loss [dB] | Trans-impedance [dBΩ] | Frequency [MHz] | insertion loss [dB] | Trans-impedance [dBΩ] |
|-----------------|---------------------|-----------------------|-----------------|---------------------|-----------------------|
| 0.01            | -35,99              | -1,99                 | 130             | -4,20               | 29,80                 |
| 0.02            | -29,99              | 4,01                  | 140             | -4,20               | 29,80                 |
| 0.03            | -26,49              | 7,51                  | 150             | -4,19               | 29,81                 |
| 0.04            | -24,02              | 9,98                  | 160             | -4,18               | 29,82                 |
| 0.05            | -22,12              | 11,88                 | 170             | -4,17               | 29,83                 |
| 0.06            | -20,58              | 13,42                 | 180             | -4,17               | 29,83                 |
| 0.07            | -19,28              | 14,72                 | 190             | -4,17               | 29,83                 |
| 0.08            | -18,17              | 15,83                 | 200             | -4,17               | 29,83                 |
| 0.09            | -17,19              | 16,81                 | 210             | -4,18               | 29,82                 |
| 0.1             | -16,33              | 17,67                 | 220             | -4,20               | 29,80                 |
| 0.2             | -11,08              | 22,92                 | 230             | -4,23               | 29,77                 |
| 0.3             | -8,57               | 25,43                 | 240             | -4,26               | 29,74                 |
| 0.4             | -7,18               | 26,82                 | 250             | -4,29               | 29,71                 |
| 0.5             | -6,37               | 27,63                 | 260             | -4,32               | 29,68                 |
| 0.6             | -5,88               | 28,12                 | 270             | -4,34               | 29,66                 |
| 0.7             | -5,60               | 28,40                 | 280             | -4,37               | 29,63                 |
| 0.8             | -5,43               | 28,57                 | 290             | -4,40               | 29,60                 |
| 0.9             | -5,33               | 28,67                 | 300             | -4,44               | 29,56                 |
| 1               | -5,28               | 28,72                 | 310             | -4,48               | 29,52                 |
| 2               | -5,14               | 28,86                 | 320             | -4,51               | 29,49                 |
| 3               | -5,09               | 28,91                 | 330             | -4,55               | 29,45                 |
| 4               | -5,05               | 28,95                 | 340             | -4,61               | 29,39                 |
| 5               | -5,03               | 28,97                 | 350             | -4,70               | 29,30                 |
| 6               | -5,00               | 29,00                 | 360             | -4,81               | 29,19                 |
| 7               | -4,97               | 29,03                 | 370             | -4,94               | 29,06                 |
| 8               | -4,94               | 29,06                 | 380             | -5,08               | 28,92                 |
| 9               | -4,91               | 29,09                 | 390             | -5,24               | 28,76                 |
| 10              | -4,87               | 29,13                 | 400             | -5,44               | 28,56                 |
| 20              | -4,60               | 29,40                 | 410             | -5,73               | 28,27                 |
| 30              | -4,48               | 29,52                 | 420             | -6,12               | 27,88                 |
| 40              | -4,41               | 29,59                 | 430             | -6,61               | 27,39                 |
| 50              | -4,35               | 29,65                 | 440             | -7,18               | 26,82                 |
| 60              | -4,31               | 29,69                 | 450             | -7,97               | 26,03                 |
| 70              | -4,27               | 29,73                 | 460             | -9,30               | 24,70                 |
| 80              | -4,25               | 29,75                 | 470             | -11,56              | 22,44                 |
| 90              | -4,23               | 29,77                 | 480             | -14,81              | 19,19                 |
| 100             | -4,22               | 29,78                 | 490             | -18,58              | 15,42                 |
| 110             | -4,21               | 29,79                 | 500             | -22,33              | 11,67                 |
| 120             | -4,21               | 29,79                 |                 |                     |                       |

Table1: Insertion loss and transfer impedance: 10 kHz to 500 MHz, typical data

## Bulk Current Injection Probe

### 5 RF forward power requirements

ISO 11452-4 specifies BCI severity test levels as displayed in Table 2 and Figure 2:

| Frequency band [MHz] | Test level I [mA]                 | Test level II [mA]                 | Test level II [mA]                 | Test level VI [mA]                 | Test level V [mA]                                                  |
|----------------------|-----------------------------------|------------------------------------|------------------------------------|------------------------------------|--------------------------------------------------------------------|
| 1 - 3                | $60 \times f \text{ [MHz]}/3$     | $100 \times f \text{ [MHz]}/3$     | $150 \times f \text{ [MHz]}/3$     | $200 \times f \text{ [MHz]}/3$     | Specific values agreed between the users of this part of ISO 11452 |
| 3 - 200              | 60                                | 100                                | 150                                | 200                                |                                                                    |
| 200 - 400            | $60 \times 200 / F \text{ [MHz]}$ | $100 \times 200 / F \text{ [MHz]}$ | $150 \times 200 / F \text{ [MHz]}$ | $200 \times 200 / F \text{ [MHz]}$ |                                                                    |

Table 2: BCI test severity levels

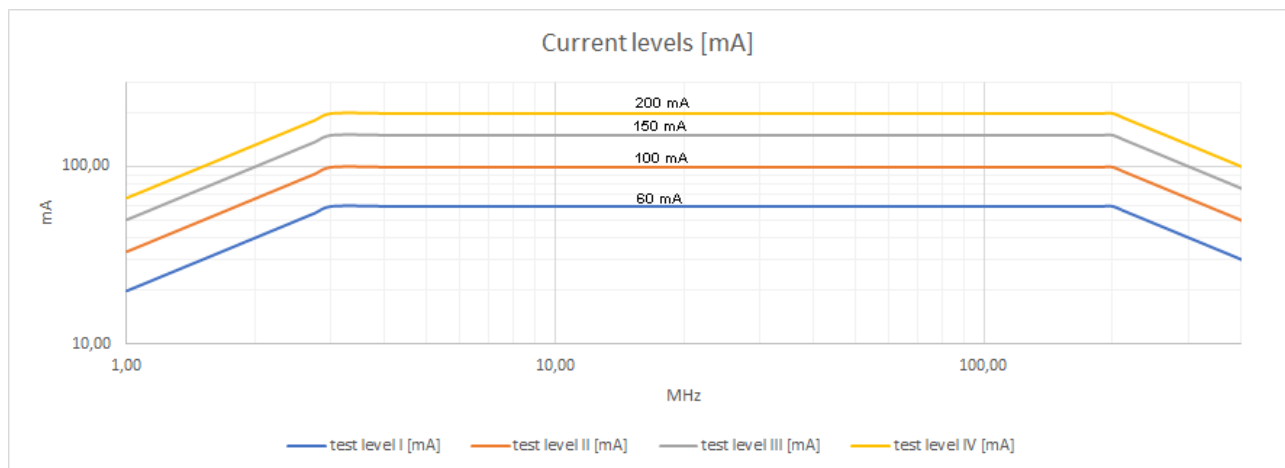


Figure 2: Current level test limits

Maximum frequency step sizes should be not greater than the maximum frequency step sizes used in testing, and shown in Table 2.

| Frequency band [MHz] | $1 < f \leq 10$ | $10 < f \leq 200$ | $200 < f \leq 400$ |
|----------------------|-----------------|-------------------|--------------------|
| Linear step [MHz]    | 1               | 5                 | 10                 |

## Bulk Current Injection Probe

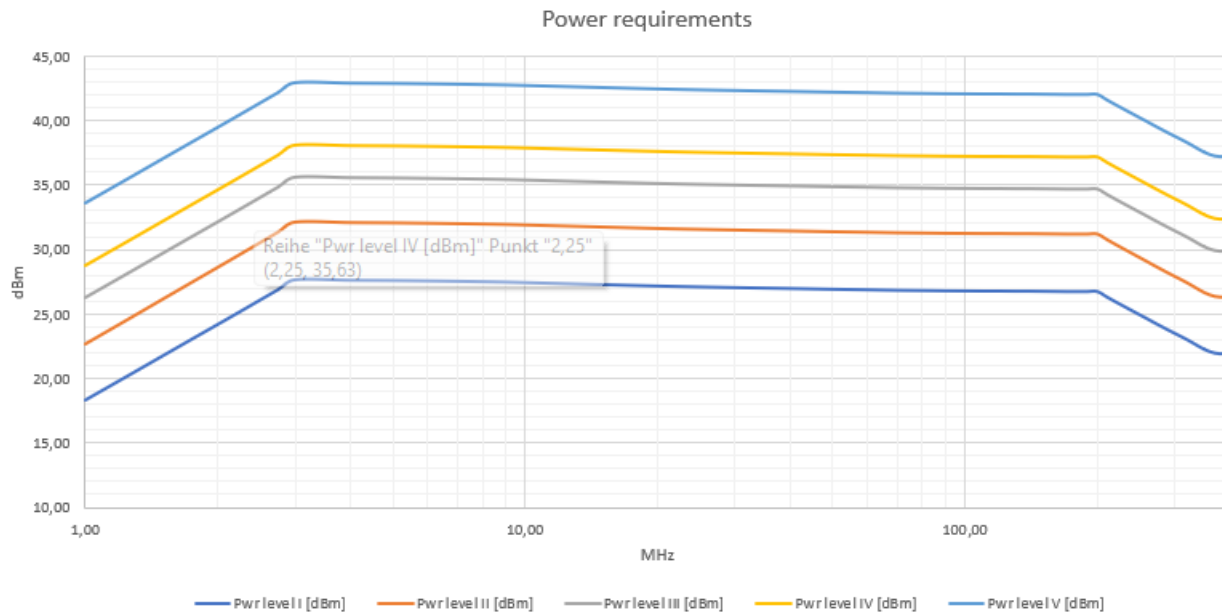


Figure 3: corresponding required RMS forward power into the TBBCI1-300K420-HV BCI probe

Note that the power is given as RMS power. The PA has to be able to deliver a 5.1 dB higher peak power to achieve the required RMS power for an 80% AM modulated signal.


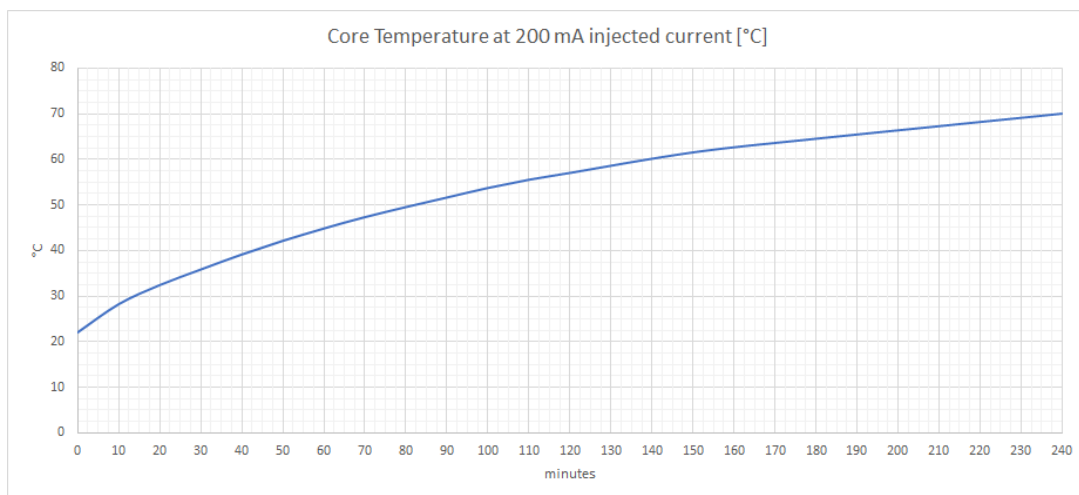


Figure 4: Core temperature increase over time

## Bulk Current Injection Probe

### 6 Accessories

Tekbox supplies a calibration fixture for the TBBCI1 series of snap on BCI probes:

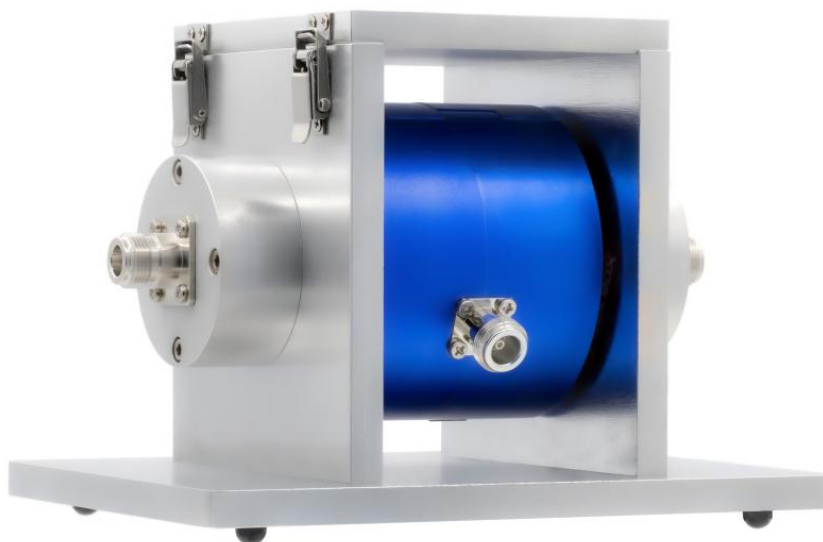

*Picture 2: TBBCI1-CAL BCI probe calibration fixture*

In order to create a complete immunity test set-up, Tekbox supplies further accessories such as 150 Ohm to 50 Ohm transitions, attenuators, modulated wideband RF power amplifiers, RF current monitoring probes and EMCview PRO software for automated calibration and measurement.

### 7 Ordering Information

| Part Number       | Description                                             |
|-------------------|---------------------------------------------------------|
| TBBCI1-300K420-HV | Snap on BCI probe, beech-wood box, calibration protocol |
| TBBCI1-CAL        | Calibration fixture for TBBCI1 current probe series     |
| TBCDN-50-150      | 50 Ohm to 150 Ohm adapter, N-male to N-female, 4W       |
| TBATT-6dB-10W     | 6 dB attenuator, N-male to N-female, 10W                |
| TBATT-6dB-25W     | 6 dB attenuator, N-male to N-female, 25W                |
| TBATT-6dB-50W     | 6 dB attenuator, N-male to N-female, 50W                |



## Bulk Current Injection Probe

|                 |                                                    |
|-----------------|----------------------------------------------------|
| TBATT-6dB-100W  | 6 dB attenuator, N-male to N-female, 100W          |
| TBATT-30dB-10W  | 30 dB attenuator, N-male to N-female, 10W          |
| TBATT-30dB-25W  | 30 dB attenuator, N-male to N-female, 25W          |
| TBATT-30dB-50W  | 30 dB attenuator, N-male to N-female, 50W          |
| TBATT-30dB-100W | 30 dB attenuator, N-male to N-female, 100W         |
| TBMDA5          | RF amplifier, 150kHz-400 MHz, 2W, AM/PM modulator  |
| TBMDA6          | RF amplifier, 150kHz-250 MHz, 25W, AM/PM modulator |
| EMCview PRO     | EMC software for emission and immunity testing     |

## 8 History

| Version | Date     | Author     | Changes                              |
|---------|----------|------------|--------------------------------------|
| V 1.0   | 8.1.2026 | Mayerhofer | Creation of the preliminary document |
|         |          |            |                                      |

[www.tekbox.com](http://www.tekbox.com)

**TekBox Digital Solutions Vietnam Pte. Ltd.**

Factory 4, F4, Lot I-3B-1, Saigon Hi-Tech Park, Tan Phu Ward, District 9, Ho Chi Minh City, Vietnam